

Operator: Save these instructions for future use!

FAILURE TO READ AND FOLLOW ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING OR OPERATING THIS CONTROL COULD CAUSE PERSONAL INJURY AND/OR PROPERTY DAMAGE.

⚠ WARNING

This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. If the information in these instructions is not followed exactly, a fire, explosion, or production of carbon monoxide may result, causing property damage, personal injury, or loss of life. The qualified service agency performing the work assumes the responsibility for the proper conversion of this appliance with this kit.

APPLICATION

These regulated L.P. Gas to regulated Natural Gas conversion kits allow the 36C, 36D, 36E, 36G, 36H and 36J Series gas valves to be used on natural gas applications. **These conversion kits are for use on all single stage, fast and slow open models and 36G, 36H and 36J two stage models.**

TO CONVERT FROM L.P. TO NATURAL GAS

1. Remove regulator cover screw.
2. Remove regulator adjustment screw (beneath the cover screw).
3. Remove L.P. regulator spring from regulator sleeve.
4. Insert the natural gas regulator spring (provided in the conversion kit) into the regulator sleeve.
5. Replace the regulator adjustment screw. Then adjust the outlet pressure to the appliance manufacturer's specified outlet pressure.
6. Replace the regulator cover screw.
7. Attach the WARNING label (provided in the kit) to the gas valve where it can be readily seen. Also attach the small round NAT. GAS label to the top of the regulator cover screw.
8. If present, pilot burner is to be used, the pilot orifice must be replaced.

Conversion back to L.P. Gas use may be made at a later date by retaining the L.P. spring (removed in step 3, above) and following the same procedures (except for burner pressure given in step 5).

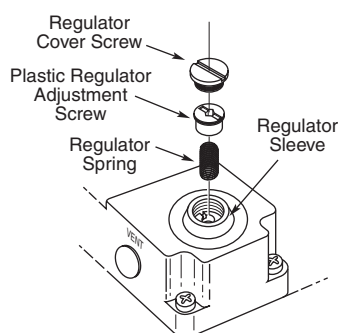


Figure 1. 36C and 36D Models

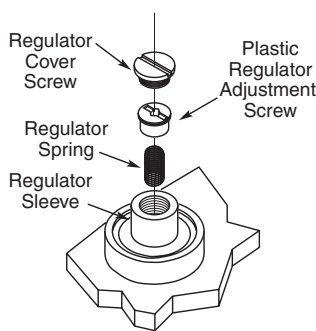


Figure 2. 36E, 36G and 36J Single Stage Models

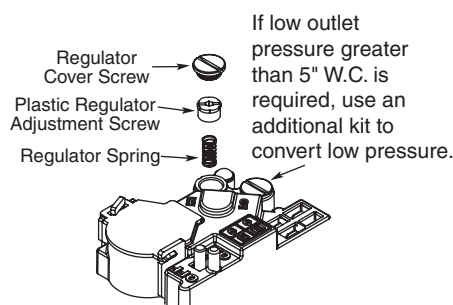


Figure 3. 36G and 36J 2-Stage models


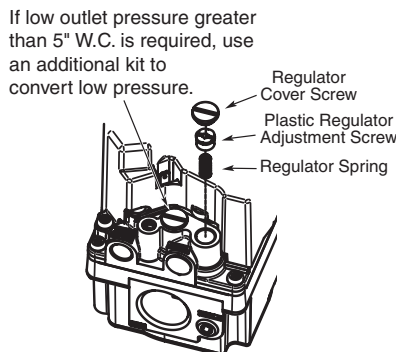


Figure 4. 36H Single Stage and 2-Stage models



WARNING Label

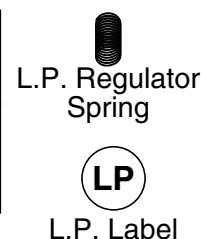

L.P. Label